

**CALL 72 HOURS BEFORE YOU DIG – Dial 811**

**It shall be the member's responsibility to stay clear of all underground facilities.**

**NOTICE**

This drawing illustrates NREC requirements only, and is not intended to be a comprehensive guide for the installation of an electrical service. To insure a safe, quality installation that complies with the National Electrical Code and local code requirements, the Cooperative recommends that all work be done by a qualified, licensed electrical contractor. **\*Service must also be inspected by a certified, licensed electrical inspector prior to service connection. NREC reserves the right to not connect a service it deems unsafe.**

**Notes**


1. Member provides and installs: the service drop attachment point; service entrance conductors; conduits; weatherhead; meter socket; service disconnect switch; ground rod and wire; and all related materials. All equipment and conduit connections shall be raintight.
2. Cooperative provides and installs meter and service drop conductors and makes connections at the weatherhead.
3. This service shall be installed on the building at a location mutually agreed upon by the member and the Cooperative.
4. A minimum of 3'-0" of each conductor shall extend from the weatherhead. The neutral may be bare or insulated and marked with white tape on both ends and may be bare wire.
5. A service mast may be required to meet minimum clearances.
6. Point of attachment shall be either accessible to Cooperative's bucket truck or have enough surface (such as wall or building structure) and sufficient ground space on same member's property to safely support a ladder.

**Overhead Meter  
on Home or Building Attachment  
to Wall or Fascia  
Single Phase 240V Service Up to 320A  
January 2019  
NOT TO SCALE**



**Northwestern Rural Electric  
Co-operative Association, Inc.**

A Touchstone Energy® Cooperative

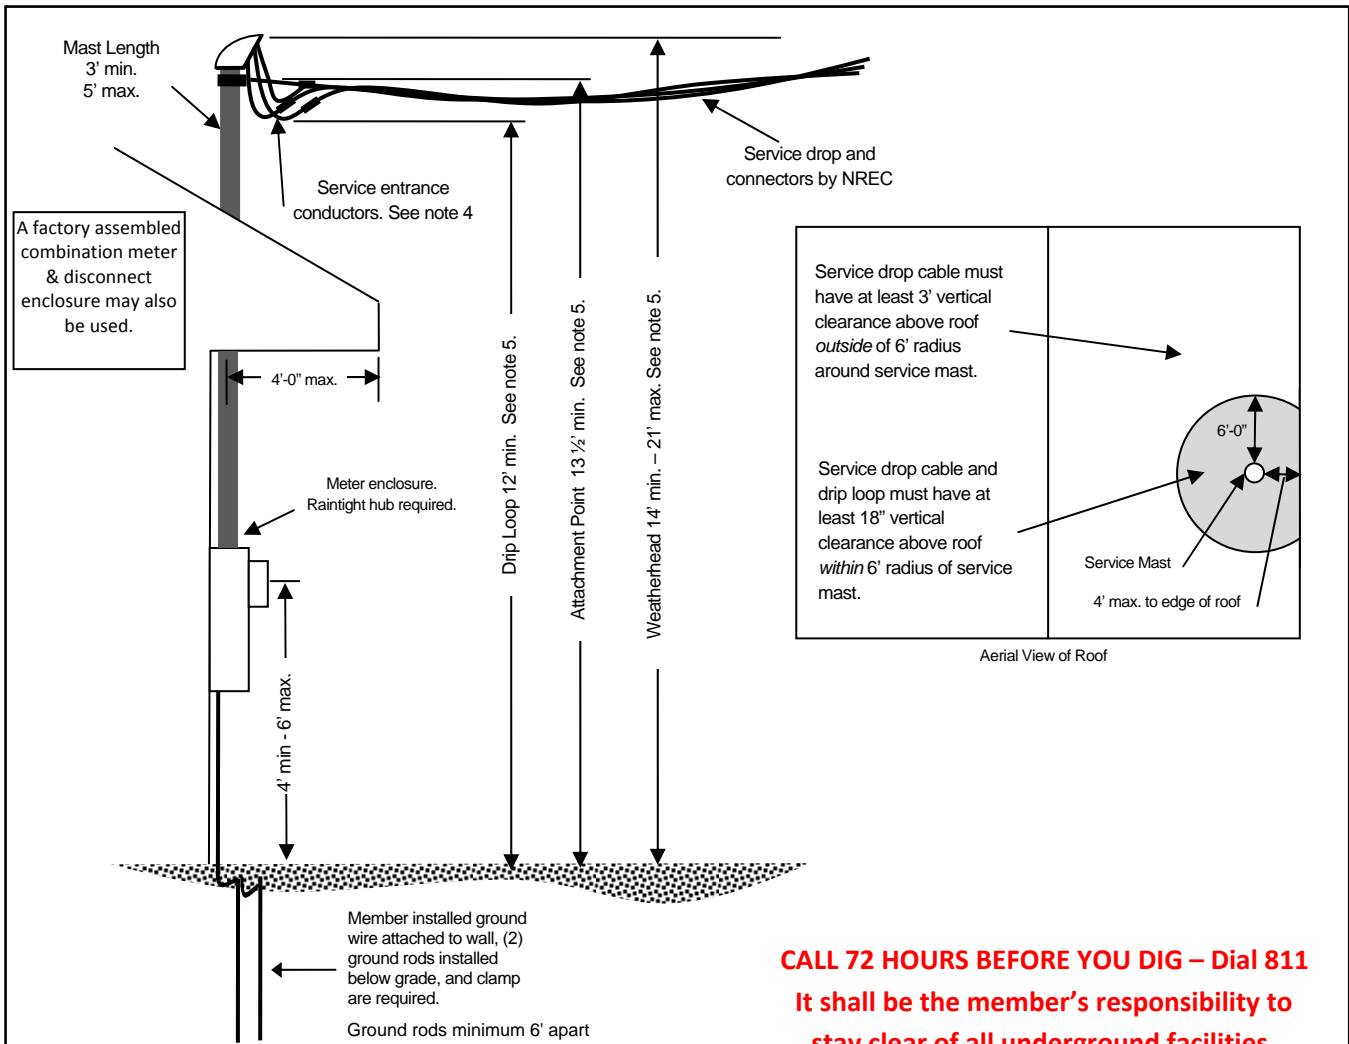

**CALL 72 HOURS BEFORE YOU DIG – Dial 811**  
**It shall be the member's responsibility to stay clear of all underground facilities.**

**NOTICE**

This drawing illustrates NREC requirements only, and is not intended to be a comprehensive guide for the installation of an electrical service. To insure a safe, quality installation that complies with the National Electrical Code and local code requirements, the Cooperative recommends that all work be done by a qualified, licensed electrical contractor. **\*Service must also be inspected by a certified, licensed electrical inspector prior to service connection. NREC reserves the right to not connect a service it deems unsafe.**

**Notes**

1. Member provides and installs: the service drop attachment point; service entrance conductors; conduits; weatherhead; meter socket; service disconnect switch; ground rod and wire; and all related materials. All equipment and conduit connections shall be raintight.
2. Cooperative provides and installs meter and service drop conductors and makes connections at the weatherhead.
3. This service shall be installed on the building at a location mutually agreed upon by the member and the Cooperative.
4. A minimum of 3'-0" of each conductor shall extend from the weatherhead. The neutral may be bare or insulated and marked with white tape on both ends and may be bare wire.
5. A service mast may be required to meet minimum clearances.
6. Point of attachment shall be either accessible to Cooperative's bucket truck or have enough surface (such as wall or building structure) and sufficient ground space on same member's property to safely support a ladder.

Overhead Meter  
 on Home or Building  
 Service Mast Attachment  
 Single Phase Meter up to 320A  
 January 2019  
 NOT TO SCALE



**Northwestern Rural Electric  
 Co-operative Association, Inc.**

A Touchstone Energy\* Cooperative